 


# XT-LITE satellite phone USER GUIDE

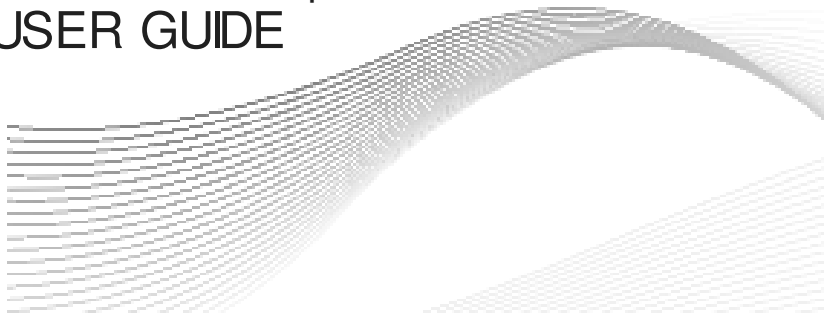

 
THURAYA {}()








## Parts Description

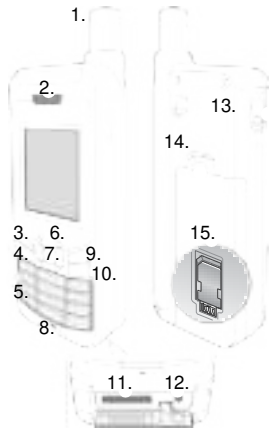

1. Satellite antenna
2. Receiver
3. Left soft key
4. Call key
5. Alphanumeric keypad
6. Navigation keys
7. Selection key
8. Microphone
9. Right soft key
10. End key
11. USB/Data cable jack
12. Chargerjack
13. Earphone jack (Earphones are available as an optional accessory)
14. Battery release
15. SIMcard holder

## Overview of the Home Screen

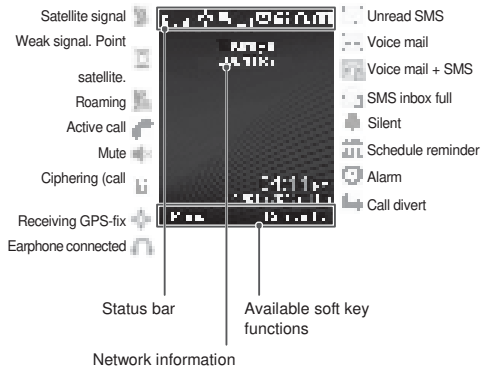 



## Getting Started

---

 
### Inserting the SIM card

Make sure to insert the SIM card in the shown direction before inserting the battery.



### Inserting the battery

Insert the battery from the bottom end first. Then push down the top end until you hear it click in place.



### Charging the battery

Open the cover at the bottom of the phone and firmly connect the charger to the charger jack.



### Network connection

When the XT-LITE is powered on, the phone will search for the network and acquire location information. If the SAT and location icons are lashing, the phone is yet to receive the location information and you will be able to make a call or send a message once the lashing stops. Upon successful registration to the network, the phone will display the country and the signal strength.

# Calls

---

## Making a call

To make a call, enter a phone number using the keypad or choose a saved contact and then press the **Call** key.

## Receiving a call

To receive a call, press the **Call** key or any key on the keypad.

## During a call

During a call, you can mute the call or put the call on hold from the **Options** menu.

## Swapping calls

While receiving an incoming call during an already active call, select **Swap**. This will allow you to connect with up to 6 users.

## Conference calls

- 1 During an active call, go to **Options > New call**. The first call is automatically put on hold.
- 2 Call the other user's phone number.
- 3 To add the first user into the conference call, go to **Options > Multiparty**.  
You can include up to 6 users in the conference call by repeating steps 1 to 3.



### Note

During a conference call, you may choose to speak with a user in private. Select the user and go to **Options > Private**, and then all other calls are put on hold automatically.

## Messaging

---

### Sending messages

- 1 Go to **Menu > Messages > New message**.
- 2 Enter the message.
- 3 Add the phone numbers of the recipient(s).
- 4 Select **Options > Send**.

#### **Tips**

Press the **\*** key for symbol entry, the **#** key for switching between number and text, and **Options > AutoText** for predictive text entry.

### SMS to email

While writing a message, you can change the sending format to email.

- 1 Select **Options > Sending options > Format > SMS to email**.
- 2 Select **Options > Send** > enter an email address > **OK** > enter an email center number > **Send**.

## Features

---

### Navigation

- Find your current coordinates
- Enter waypoints to navigate to a specific position with the electronic compass
- Geo reporting can be used to send your coordinates to pre-defined numbers via SMS. Follow Option A to send only the coordinates and Option B to send coordinates plus a user-defined message (see next page).



## Features

---

### Option A

To send only the GPS coordinates (without user-defined message):

Go to **Menu > Navigation > Geo reporting**.

- 1 Enter recipient(s):
  - Enter up to four recipients, one for each of the empty slots.
  - Select the slot, go to **Options > Add recipient**, and choose to input the number or select from contacts.
- 2 Set the interval:
  - Select any of the four slots and go to **Options > Message intervals**.
  - Choose frequency of outgoing messages (every 3 minutes to every 2 hours).

### Option B



To send a user-defined message along with the GPS coordinates:

Go to **Menu > Navigation > Geo reporting**.

- Follow steps 1 and 2 from above.
- Turn on SOS message:
  - Select any of the four slots and go to **Options > SOS message > On**.
- Set the SOS message:
  - Select any of the four slots. and go to **Options > Setup SOS message**.
  - Write the message and press the **Selection** key to save.



### How to activate and deactivate Geo reporting:

- To activate from the home screen, long press the right soft key .
- To deactivate while in use, short press the right soft key .

## Organizer

Use the Organizer of your XT-LITE for a range of convenient features such as setting alarms, scheduling appointments, using the built-in calculator, stopwatch and world time.

## Call notification

---

Your Thuraya XT-LITE allows you to receive a notification of an incoming call even if your satellite signal is too weak to receive the call itself. This is particularly useful when the Thuraya XT-LITE is in your pocket with the antenna stowed, and only has a weak signal.

- 1 Fully extend the antenna of your Thuraya XT-LITE.
- 2 Ensure that you have direct line of sight to the satellite.
- 3 As soon as the signal strength is strong enough, the warning disappears from the display. You can now accept the call as usual by pressing the **Call** key.

## Software Upgrades

---

A software upgrade is only required if Thuraya releases a newer software version. Before performing an upgrade please check your current software version under **Security > S/W version** to see if an upgrade is required.

- 1 Download and install the latest XT-LITE upgrader file from [www.thuraya.com](http://www.thuraya.com).
- 2 Download the latest XT-LITE software from [www.thuraya.com](http://www.thuraya.com).
- 3 Power on your Thuraya XT-LITE with a fully charged battery.
- 4 Connect the PC and the Thuraya XT-LITE using the USB cable.
- 5 Double click the XT-LITE upgrader icon on the desktop and the program will guide you through the upgrade process.

### How to connect the data cable for a software upgrade:

Open the cover at the bottom of the phone and firmly connect the USB cable to the UDC jack.



Afterwards attach the other side of the data cable to your PC.

## Useful Tips

Function	Operation
Keypad Lock/Unlock	Press and hold the # key to lock the keypad. To unlock press the right soft key followed by the # key within 3 seconds.
Adding Contacts	1. Enter a phone number and press the <b>Selection</b> key. Or go to <b>Contacts &gt; Add contact</b> . 2. Select the storing location (phone or SIM card) and phone number information.
Silent Mode	Long pressing the * key will switch between <b>Silent</b> and <b>Normal</b> mode.
Checking your current location	Go to <b>Menu &gt; Navigation &gt; Current position</b> .
Changing text input mode	Long press of the * key will switch between <b>AutoText</b> and <b>Normal</b> mode.
Changing languages	Go to <b>Menu &gt; 7.Settings &gt; 3.Language</b> .
Call logs	To see your recently called numbers press the <b>Call</b> key (or go to <b>Call logs</b> ).

## Maintaining your XT-LITE

Your satellite phone needs to be in optimal working condition when you need it. To ensure your phone is prepared, a regular Thuraya phone test provides you with peace of mind that ensures your satellite phone is working when it is needed:

- Test your Thuraya phone regularly, especially if you have not used it for some time (dial the free number 11 11 2 from your XT-LITE to test if it is working properly)
- Charge the XT-LITE's battery once a month to have the phone ready when you need it
- Check your subscription or credit balance regularly